

GT 601

Quick User Guide



Introduction

The GT 601 Control Panel can control up to 136 zones with 99 individual Users. Control of the system is via Remote Keypads (RKPs). Control is also possible via Proximity Reader(s). Facility is provided for Central Station and/or Vo- Comm (message communication) to inform of system status and alarm events. Vo- Comm messages may be sent to standard land line telephones or mobile telephones. Please take time to familiarise yourself with the type of equipment fitted to your premises as it will prove invaluable whilst using this manual.

IMPORTANT USER INFORMATION

If the Control Panel is **non EN** then all displays will be shown and **"ENTER CODE CHECK"** will not be displayed.

All information displays will remain until cleared by the User.

User Code Types

Master Level User Code BS / EN2 (default) - **5678**

EN3 (default)- **005678**

 
Programming & Deleting User Codes (By Master code only)

You will be advised by your installation company on the code length required. **Under no circumstances should the actual user code be written down.**

If your installation company has given you key switches for the operation of your system, the last five user codes may have been reserved for use by these key switches.


If your engineer has indicated that some of the user numbers on your system have been reserved, you should not use them whilst programming user codes. If you do so your system may be adversely affected.

1) With the display showing:-




01 JAN 19 : 58 : 01

 2) Enter a Master Code, the display will show:-




Do you want to . .
SET the System ?

 3) Press NO five times, the display will show:-




Do you want to . .
Prog. USER CODES ?

 4) Press YES, the display will show:-



Enter User No. - -
+YES or NO: View

 
5) Enter the user number that you wish to program followed by YES, the display will show:-



Now Enter Code . .
- - - - - Then YES

If you need to see allocated user numbers, press NO then keep pressing YES to view used or spare numbers. If spare, press NO.

 6) Either Enter the User Code you require followed by YES
(If you wish to Delete a Code enter six Zeros followed by YES)




Code Type
= Master ok ?

Or

Present your G-Tag to the Reader The display will show:-

 
- 7) Press NO until the Code Type you require is displayed then press YES.
Display will show:- (See full user Instructions for Code Types)
Some examples below:



- Set Only** Only Allows for the setting of the system.
- Main** Allows Setting, Part Setting, Area Setting, Zone Remove, System Test, Unsetting.
- Master** Allows Setting, Part Setting, Area Setting, Zone Remove, System Test, Viewing the Log, Chime On/Off, Program User Codes, Set Time/Date, Unsetting.

- 8) Code Groups are only used in conjunction with controlling outputs. This is dealt with in the Advanced Code Programming section (See full user Instructions) of this manual, Press YES to accept None.

 
- 9) The display will show:-



This determines if using this user code to Set or Unset the system will trigger the Vo-Comm. (For more details on Vo-Comm please refer to the Vo-Comm section). Press NO until the setting you require is displayed (YES or NO). Then press Yes.

Note: The Vo-Comm will need to be programmed for this option to work (please refer to the Vo-Comm section in the full user manual).

 
- 10) The display will show, for example:-




- 11) If you wish to accept the Username shown press YES and jump to step 15

Or

 If you wish to change the Username shown press NO, the display will show:-



- 12) You may now enter up to nine characters for the username using the layout shown below for the allocation of characters.

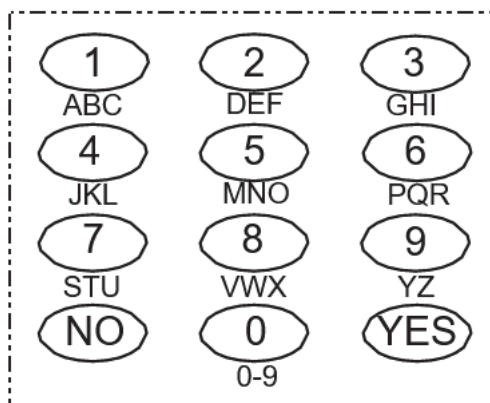

13) Referring to the character map enter the required character (pressing the 3 key will display 'G', pressing it again will show 'H' and again will show 'I '), once the correct character is displayed press YES and the display will move on to the next position.

14) Continue entering characters (up to 9). If you require a blank space press YES while the '-' is displayed

15) As you press YES for the ninth character (or if you have jumped from step 11) the display will change to:-

Do you want to Prog.
USER CODES ?

16) If you wish to program other User Codes return to step 4

Or

Press 0 to return to:-

01 JAN 19 : 58 : 01

Programming Time & Date

1) With the display showing:-

01 JAN 19 : 58 : 01

2) Enter a Master Code, the display will show:-

Do you want to . .
SET the System ?

3) Press NO six times, the display will show:-

Do you want to Set
DATE / TIME ?

4) Press YES, the display will show:-

Summer - Adjust is
On ok ?

5) Press YES for Auto Adjust for British Summer Time the display will show:-

Year is 20xx
ok ?

6) Press NO to change, display will show:-

Enter Year
20 -- Then YES

7) Enter the last two digits of the Year then press YES. Display will show:-

Year is 2019
ok ?

8) Press YES. Display will show:-

Enter Day / Month
-- / -- Then YES

9) Enter the Date in the form dd/mm followed by YES. Display will show:-

Enter Hrs : Mins
-- : -- Then YES

 
10) Enter the Time using the 24Hr Clock format then YES. Display will show:-

Do you want to Set
Date / Time ?

11) Press 0 to return to Unset.


Setting the System (Using Master or Main)

1) With the display showing:-



2) Enter your **User** code.

 The display will show:-
and a continuous exit tone will sound.
(Also See "Pre-Exit Check" in Main User Instructions)
Time will count down



Note: *Count down in display depends on the setting mode programmed by the Engineer.*

3) Exit the premises via the authorised exit route.

(The exit tone will change if any detectors are violated during exit).

4) Once the premises are secure listen, (from outside the protected area) that the exit tone returns to the continuous tone.

5) Wait until the exit tone finishes before leaving.

 
Note: 1 *Setting the system with an area code will set only the area(s) associated with that code.*

Note: 2 *Setting an unset system with a cleaner code will set the full system. Note: 3 To Set the system with cleaner on-site Press CODE YES YES 0*

Unsetting the System

1) Enter the premises via the authorised entry route (the broken entry tone will sound).
Proceed to the keypad.

2) At the keypad enter a valid code, the display will show:-




3) The system is now unset.

Note: *If an Area Code has been entered, only the area associated with that code will be unset.*


Note: *If a Cleaner Code has been entered, only the cleaner area will be unset.*

Part Setting the System (using Master & Main type codes)

 
1) With the display showing:-



 2) Enter a **Master** or **Main** type code, the display will show for example:-



 3) Press 1, 2 or 3 (for Part 1, 2 or 3), the display will show for example:-



Note: If a Global code (Master or Main) has been used, all areas that are being set will be Part 1 set.

Note: If an Area Main code has been used only Part 1 set for that associated area will occur.

Note: Your installation company will have informed you what zones are being removed (omitted) for the Part Set you are using. Refer to the System Attributes section for what zones have been programmed as Part Set zones.

- 4) The exit tone may or may not be heard depending on the system settings.

- 5) Exit the premises or retire to an unprotected part of the system. At the end of the exit time either the exit sounder will stop, or a single beep will be emitted (depending on system settings).

 
Quick Part Setting System

If required there is a quick method to Part Set the system regardless of the level of code being used (except Control Level). To Part 1 Set the system Enter YES, YES CODE. The system will now start to Part 1 Set.


For Setting and Part Setting the System with Area Code, please refer to the FULL User Manual

Viewing the Event Log (Master code only)


- 1) With the display showing:-



 
- 2) Enter a **Master Code**, the display will show, for example:-



 - 3) Press **NO** three times, the display will show:-



 - 4) Press YES, the display will show, for example:-



- 5) This is the most recent event in the log.

Whilst viewing the Log,

 
Pressing NO will move back to the previous event. Pressing YES will move forward to the next event.

Pressing 7 will take you to back to the last event of the previous day.

Pressing 9 will take you forward to the first event of the next day.


Whilst viewing a zone descriptor pressing 5 will show the zone number

- 6) When you have finished viewing the Log press 0 twice the display will show:-




Re-setting the system.

 - 1) If the system is programmed for Any code reset, enter a **User** code.
The display will show:-




Note: If NO is NOT pressed then the alarm status will only be displayed for ten seconds.

 
- 2) The display will then show:- Enter your user code again.



 
- 3) The display will show:-
To return to the 'ALARM' display, press 0 then NO to view the cause.



 - 4) Press YES. The exit tone will sound, and the display will show, for example:-



 - 5) Enter the code again to abort the setting.



- 6) The system is now reset

Or

If a higher level of code is required one of the following displays will be shown:-

Use a **Master** code to reset the system.

 
 
 
Or:-

Call the installation company

Or:-

Call the central station or installation company (as instructed) and quote the number given

Or:-



- 7) To reset the system with an **Anti-Code**, contact the central station or engineer (as instructed by the installation company) and quote the number given by the display.

- 8) The central station or engineer will give a return Anti-Code, (this may contain the YES & NO keys) for example 5, YES, 2, 4.

- 9) Enter this Anti-Code into the keypad.

- 10) The system is now reset.

Note: A full and comprehensive User Manual can be downloaded from www.riscogroup.com/uk



© RISCO Group 12/2019. All rights reserved.

5IN1839 B