




LightSYS Plus Quick User Guide

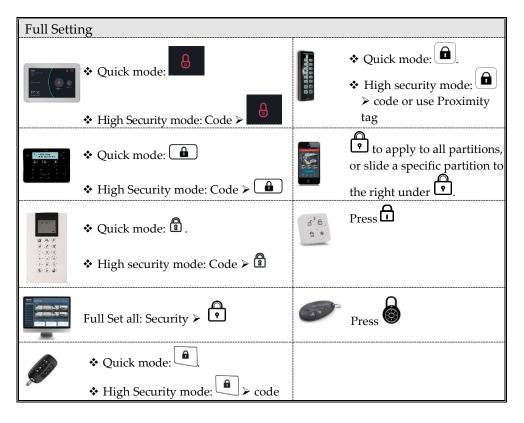

For more information about RISCO Group's branches, distributors and full product line, please visit **riscogroup.com/uk**

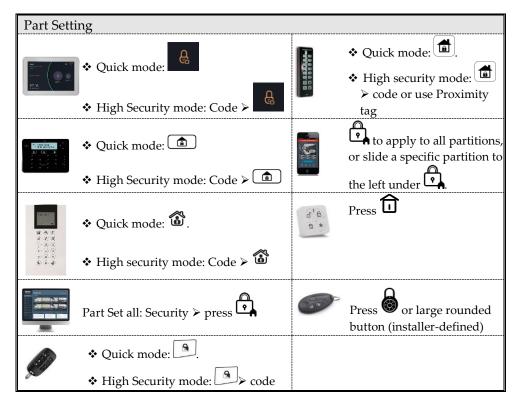


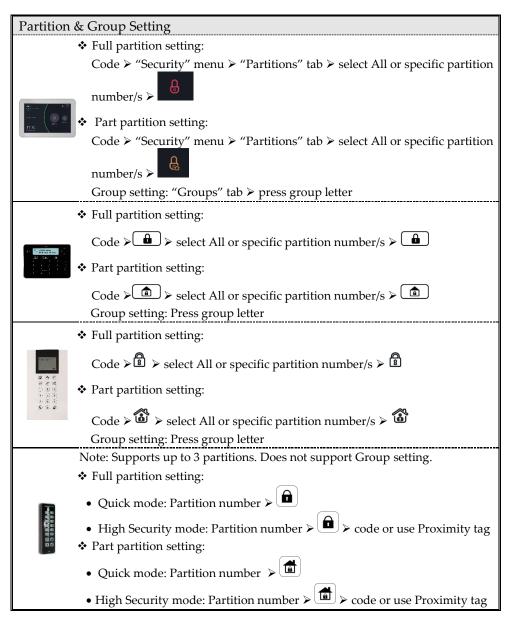

System U	Insetting		
A the second sec	Code ≽ "Security" menu ≽	- 20 22 <u>56</u> 8-	
	Code ≻ ि∎		to unset all partitions, or slide a specific partition to the center under enter code
· · · · · · · · · · · · · · · · · · ·	Code ≻ OK	5° 8 8 *	Press
	Unset all: Security >	67	Unset all: Press
	 Quick mode: . High security mode: code 		
Partition	& Group Unsetting	-	
Han and the second seco	Code ≻ "Security" menu ≻ "Partition	s″ tab ≻	select the Partitions to Unset
	Partition unsetting: Code \geq $\square \geq$ set All or specific partition number(s)	elect	Partition unsetting: Partition number ≻ Image: Partition number > Code
100000 建立的公司 中国 (1000000000000000000000000000000000000	Partition unsetting: Code > 🕅 > set	lect All o	or specific partition number(s)

Duress Ur	nsetting		
	Duress code ≽ ऀ Note: Panel is silent (no alarm sounder)	Note: Panel is silent (no alarm sounder)	
的现在分词 一般的现在分词 一般的时候一个。 一般的时候一个。	Duress code ≻ ☞ Note: Panel is silent (no alarm sounder)		
Omitting	& Un-omitting Zones		
References Processor 15 Miles 15 Miles References	Code \geq "Security" menu \geq "Detectors" tab \geq s slide switch to the right to omit	select a detector (zone) ≻	
	$ \exists r > code \checkmark > scroll to Activities menu \checkmark > Omit \checkmark > Zones \checkmark > scroll to select a omit option \checkmark. $		
·····································	$\begin{array}{c} & & & \\ & &$	K ≻ Omit OK ≻ Zones OK	
Viewing S	System Faults		
A Distance of the second secon	Code \succ from the Top Bar, press \mathbf{M} to view far	ılts	
	[★] ⇒ code ✓ > scroll to View menu ✓ > Fa	ult \checkmark > scroll to view faults	
· · · · · · · · · · · · · · · · · · ·	نج ≻ code الله > scroll to View menu الله faults	Fault In Second to view	

Viewing L	Last Alarm / Event Log		
Code > "History" menu > press "All" to view all events, or		all events, or search an event	
15.00	Note: You can filter the search according to specific types of events: All / Alarms / Faults / Smart Home / Media Events		
	[★] ⇒ code ✓ > scroll to Event Log ✓ > scroll to view events		
 ● 新聞活性市場 ● 新聞活性市場 ● 新聞市内市市場 	$: \sim \to $ code $: \sim \to $ scroll to Event Log $: \sim \to $ scroll to view events		
Viewing S	System Status		
	İ for 2 seconds	 Quick mode: #? for 2 seconds High Security mode: #? for 2 seconds > code or use Proximity tag 	
10000 一個人 一個人 一個人 一個人 一個人 一個人 一個人 一個人 一個人 一個人	Press O		
10 ×	Press		
	 ♦ Quick mode: 4? for 2 seconds ♦ High Security mode: 4? for 2 seconds > cod 	e	

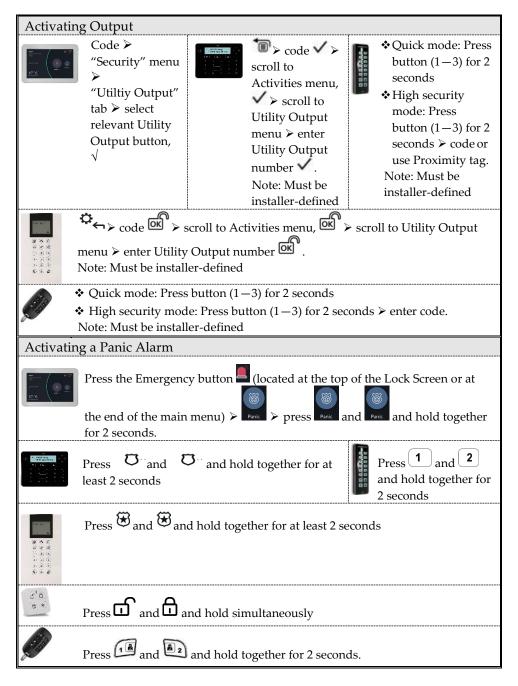

Activatir	ng a Fire Alarm
Part Image: Constraint of the second of the se	Press the Emergency button (located at the top of the Lock Screen or at the end of the main menu) \rightarrow (located at the top of the Lock Screen or at the end of the main menu) \rightarrow (located at the top of the Lock Screen or at fire and hold together for 2 seconds.
	Press $\overset{4}{\bullet}$ and $\overset{5}{\bullet}$ and hold together for at least 2 seconds. Press $\overset{3}{\bullet} + \overset{4}{\bullet}$ and hold together for 2 seconds
1000000000000000000000000000000000000	Press $\textcircled{4}$ and $\textcircled{6}$ and hold together for at least 2 seconds
Activatir	g an Auxiliary Emergency Alarm
Harman Same Harman Harm	Press the Emergency button (located at the top of the Lock Screen or at the end of the main menu) > ress ress rest and rest and hold together for 2 seconds.
	Press $7 + and + 8$ and hold together for at least 2 seconds. Press $5 + 6$ and hold together for 2 seconds
·····································	Press \textcircled{O} and \textcircled{O} and hold together for at least 2 seconds.

SMS Commands

NOTES: Command words are not case sensitive. A separator between command words may be used (or not). To receive an acknowledgement reply, add **RP** to the end of an SMS command.

commanu.			
Full Set: code + S (Example: 1234S)		Get system status: code + ST	
Part Set: code + P		Omit Zone: code + O + zone number	
Group Set: code + G + select group AD		Un-omit Zone: code + UO + zone	
Full Unset: code + US		View last alarm : code + AL	
Partition Full Set: code + S + partition number		Change FM number: code +	
Partition Part Set: code + P + p	partition number	FMPHONE + FM serial number + NEW + new phone number	
Multiple Partition Full/Part Set: code + S/P: + partition number A, + partition number B, + partition number C, etc. Partition Unset: code + US + partition number Multiple Partition Unset: code + US + partition number A, + partition number B, + partition number C, etc.		Activate Output: code + POON + PO number Deactivate Output: code + POOFF + PO number Get SIM credit level: code + CR	
Icons – Elegant Keypad			
O Power	✓ Ready	🔒 Set	
On: Power OK. Off: No power Rapid flash: System fault. Slow flash: System is programming On: Ready to set Off: Not ready to Slow flash: Ready while entry/exit zo open		On: System in full set modesetOff: System unsetto setRapid flash: Alarm	

 Image: Part Set / Omitted
 Image: Delay

 Image: Part Set / Omitted
 Image: Delay

 Image: On: System in part set or zone-omitted mode
 Image: Delay

 Image: Off: No omitted zones
 Image: Delay

 Image: Open
 Image: Delay

 Image:

LED Indicators – 2-Way Remote Control			
Operation	Send command*	Receive Status	
Full Set	Green	Red	
Part Set	Green	Orange	
Unset	Green	Green	
Alarm	Green	Flashing LED	
* If the LED	changes to ora:	nge, it indicates	a low battery condition.
Defining Use	er Codes – El	egant Keypad	
 Image: Second master code (default = 1234) ✓ 2. b to scroll to Codes/Tags > press ✓ twice. 			
3. \triangleright to scroll to the user (index number) for defining \triangleright press \checkmark twice.			
4. Enter (or re-enter) a 4–6 digit code \checkmark ; the system beeps and ACCEPTED displays			
Defining User Codes – Panda Keypad			
 Grand master code (default = 1234) ✓ to scroll to Codes/Tags > press or twice. 			
2. To scroll to the user (index number) for defining \succ press of twice.			
3. Enter (or re-enter) a $4-6$ digit code $\boxed{00}$; the system beeps and ACCEPTED displays			

Registering to the RISCO Cloud

Note: Before registering, consult with your Installer to check if you were previously registered:

If you were previously registered:

- a. If you are a RISCO Cloud End-User, accept the invitation sent to your Inbox and then Login to the RISCO Cloud / Web User Application.
- b. If you are <u>not</u> a RISCO Cloud End-User, accept the invitation sent to your Inbox and then follow the instructions to finalize the creation of your account.

If you were not previously registered:

- 1 After the RISCO Cloud has been enabled by your system installer, go to <u>www.riscocloud.com</u> and press **Register.**
- 2 Fill in your **first and last name**.
- 3 Enter your e-mail address as the Login Name (required for 1st-time activation).
- 4 Define **password** (minimum of 8 characters, including at least one small case, one upper case and one special character), and then confirm.
- 5 Enter the **15 digits Panel ID** as it appears as printed on the postcard packaged with the main panel. You can also view it on the keypad (see the LightSYS Plus User Manual).
- 6 Complete registration form including Site Name, Time Zone and Equipment ID and then press **Create**.
- 7 To complete the registration procedure, open the e-mail received at the email account you had defined as the Login Name in step 3, and then click the link to activate your registration to the Cloud.

Logging in to the RISCO Cloud / Accessing the Web User Application

- 1 Go to www.riscocloud.com
- 2 Enter your user name and password (as defined during the registration process).
- 3 Click Login.
- 4 Select the Site and then enter the **system PIN code** (user code).
- 5 Click Login.

iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.



(C C) CA

For additional information see the LightSYS Plus User Manual, available on our website: www.riscogroup.com/uk

© RISCO Group 2022. All rights reserved.

05/2022

Page 12